

How to use Slic3r for Sharebot 42 – Q

Windows installation

Double click the Slic3r executable file downloaded from our website and follow the installation. This executable file has already been saved within the software our printing profiles.

Mac installation

You need to download the software directly from Slic3r.org and download the configuration bundle of your printer from our website. Decompress the file.

Select “Load Config Bundle” from the “File” menu and select the bundle of your printer. Now you have saved all the printing profiles in the software.

How to use the printing profiles

Slic3r has three settings tabs: “Print Settings”, “Filament” and “Printer Settings”;

As default you will find “42_PLA” (or Q_PLA).

To change the printing resolution and the material, you have to select the relative profile from all the three drop-down menus. Before exporting a gcode, check out always that you have selected the same profile in the three drop-down menus. (see image below).

